

HOW IT WORKS

When the burner turns on, the pump creates vacuum pulling the valve stem indicator down, thus opening the valve. When the burner shuts off, if the vacuum is good and there are no air leaks, the valve stem indicator stays down. If the vacuum is broken, or if there is a leak between the PRV-38 and burner, then the valve stem indicator pops out, closing the valve to prevent unwanted siphoning.

Suntec Industries Incorporated

60 Aberdeen Drive Glasgow, KY 42141 (270) 651-7116 60 Aberdeen Drive Glasgow, KY 42141 (270) 651-7116 http://www.suntecpumps.com

> E Mail: Info@suntecpumps.com Website: suntecpumps.com

Open

Form 3550 6/99