
TABLE OF CONTENTS

SALES

FUEL UNITS

Model A Single-Stage	I-1
Model B Two-Stage	I-3
Model B Two-Stage, Two-Step	I-5
Model B Special Pressures	I-5
Model J Single-Stage	I-6
Model H Two-Stage	I-8

VALVES

Models R and C Solenoid	I-10
-------------------------------	------

INSTALLATION

FUEL UNITS

Model A Single-Stage	II-1
Model B Two-Stage	II-1
Model A Single-Stage, Two-Step	II-7
Model B Two-Stage, Two-Step	II-7
Model B Special Pressures	II-7
Model J Single-Stage	II-12
Model H Two-Stage	II-12

OTHER PUMPS

Model A Waste Oil	II-20
Model J Waste Oil	II-20
Boost Pumps and Central System	II-23

PIPING

Single-Pipe	III-1
Gravity Feed	III-2
Lift Feed	III-3
Two-Pipe	III-3
Gravity Feed	III-5
Lift Feed	III-6

LINE SIZING

Single-Pipe	See Specific Model Installation
Two-Pipe	III-7
Adding Additional Units	III-8
Priority Controls	III-9
Multiple Units with Manifold Piping	
Gravity Feed	III-10
Lift Feed	III-11
Check Valves	III-12
Thermal Expansion	III-12

SERVICE

Routine or Annual Checkout	IV-1
Trouble Call	IV-1
System Troubleshooting Sequence	IV-2
Troubleshooting Guide for Fuel Pump	IV-4
Testing Fuels Units and Systems	IV-7
Vacuum Test - Fuel Units	IV-7
Vacuum Test - System	IV-9
Pressure Test	IV-10
Operating and Cutoff Test	IV-11
Strainers and Field Service	IV-12
Filters and Filtration	IV-15
Solenoid Valves and Field Service	IV-17